
Omega National-D 0 U С

INTERIOR DUCTWORK KIT

90358DUC1

To be used with Omega National Products, LLC RHVBB20 Blower RHVBF10 Fan

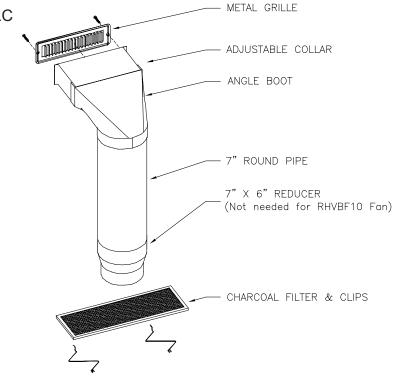

- 1. Install blower or fan in metal liner (sold separately) following instructions provided .
- 2. Install charcoal filter into blower or fan.
- 3. Place 6" end of reducer if needed, over the blower fan collar and secure in place.
- 4. Place the non-crimped end of the 7" round pipe over the reducer. Seal and secure.
- 5. Place angle boot over the crimped end of the round pipe. Seal & secure.
- 6. Trim adjustable collar to fit application.
- 7. Mark and cut 3" x 10" hole for the Metal Grille. Seal and secure collar to angle boot and position over existing hole.
- 8. Position metal grille on face of chimney or soffit and secure with screws provided.



1010 Rowe St. Elkhart, IN 46516 (574) 295-5353 Fax (800) 367-3329 10-0533-1A VS-44

©Omega National Products, LLC form OME-66, 02/08